

TI-ZA 70d

Deutsche Wurlitzer GmbH
 Wurlitzerstraße 6
 D-32609 Hüllhorst
 Tel. +49(0)5744 914-0
 Fax +49(0)5744 941 220
 www.deutsche-wurlitzer.de
 contact@deutsche-wurlitzer.de

11/02
 bo-ku

Reprogramming of an I V C - unit after exchange

Programming with the buttons 'D' and '+' of the programming panel:

In case a cigarette vending machine is not in operation after exchange of the IVC unit or error code appears while pressing one selection button, the main programming in service program 15, buttons 1 - 2 - 5 and 9 have to be checked and/or to be corrected.

Call up service program 15

For **new** IVC units, starting Eprom version 4.00: press button P - hold it - and press button S until display shows _____ 15

For **older** IVC units, up to Eprom version 3.82:
 Press button S until display shows _____ 07

Then press button P - hold it - and press selection button 8, display shows _____ 11

Press button S until display shows _____ 15

Then press button D, the outer RH zero flashes _____ 0000

With button + you can set this flashing digit to a number between 0 and 9.

Press button D again, the flashing digit changes one to the left _____ 0000

With button + you can also set this digit to a number between 0 and 9, etc..

Through this procedure you can enter the following mentioned machine-specifically code numbers in four digits for the buttons 1 - 2 - 5 and 9 to programme the individual button, i.e. when entered the numbers keep pressed the button and press simultaneously button P shortly.

Additional price programming - if required - service program 08

for example selling price Euro 3.00

For **older** IVC units, up to Eprom version 3.82, press button S until display shows _____ 07

Then press button P - hold it - and press button 1, display shows _____ 08

For **new** IVC units, starting Eprom version 4.00, call up service program 08
 by pressing button S until display shows _____ 08

Press button D once, the outer RH zero flashes _____ 0000

With button + you can set this flashing digit to a number between 0 and 9 (not necessary in this example).

Press button D, the flashing digit changes one to the left _____ 0000

Press button D again, the next digit flashes _____ 0000

Set this digit to 3 by pressing button + until display shows _____ 0300

Finally press button P - hold it - and press all selection buttons which should also sell for this price.

When finished price programming press button S until the LED 'In Operation' flashes.

Check price setting: Press all selection buttons, display shows respective prices.


When finished programming you should carry out machine test in service program 07. Therefore

press button S until display shows _____ 07

Press button 1: display test. First display shows Eprom version of the IVC unit,
 then all segments of the figures in the display are driven.




Press button 7: test vend. Every column vends one pack automatically.

ATTENTION! Columns with single drive are blocked when tested without packs.

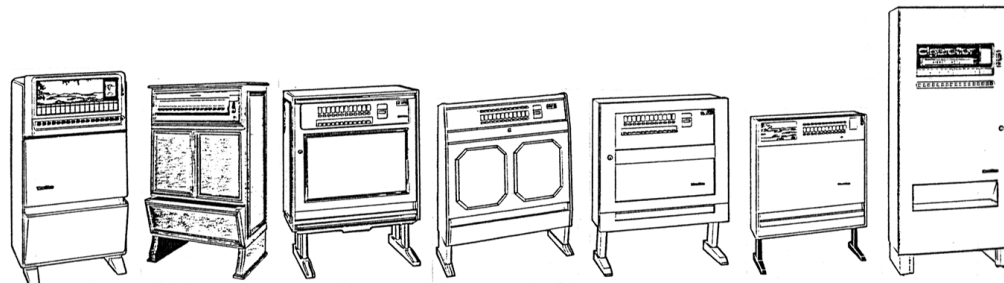



Service program 15, button ...

	①	②	⑤	⑨	OR	⑨
				Display with red LED		Display with green LCD
Machines with electr. coin acceptor + active BDTA	0 1 6 9	3 1 0 7	0 2 0 0	0 0 0 0		
Machines with electr. coin acceptor with 2 or 5 tubes change giver + active BDTA (NO selffilling) with additional waiter key option	0 3 6 9	3 1 0 7	0 2 0 0	0 0 0 0		
Machines with coin system according to NRI Simplex 0/ MDB + active BDTA	4 3 2 9	3 1 0 7	0 2 2 0	0 0 0 0		
Machines with coin or card system according to Executive standard + active BDTA	0 1 8 9	3 1 0 7	0 2 0 0	0 0 0 0		
Machines with coin or card system according to BDV standard + active BDTA	0 1 8 9	3 1 0 7	9 2 0 0	0 0 0 0		

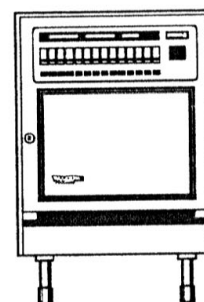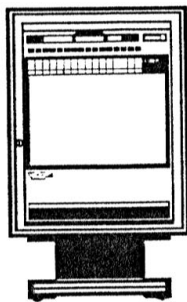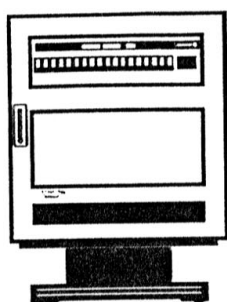

Service program 15, button ...


	①	②	⑤	⑨	OR	⑨
				Display with red LED		Display with green LCD
Machines with electr. coin acceptor + active BDTA with additional waiter key option	1 4 6 7	3 1 0 7	2 2 0 0	0 0 0 0		0 0 4 0
Machines with electr. coin acceptor and hopper + active BDTA	1 6 6 7	3 1 0 7	2 2 0 0	0 0 0 2		0 0 4 2
Machines with coin system according to NRI Simplex 0/ MDB + active BDTA	5 6 2 3	3 1 0 7	2 2 2 0	0 0 0 0		2 0 4 0 with electr. purse 0 0 4 0
Machines with coin or card system according to Executive standard + active BDTA	1 4 8 3	3 1 0 7	2 2 0 0	0 0 0 0		0 0 4 0
Machines with coin or card system according to BDV standard + active BDTA	1 4 8 3	3 1 0 7	9 2 0 0	0 0 0 0		0 0 4 0

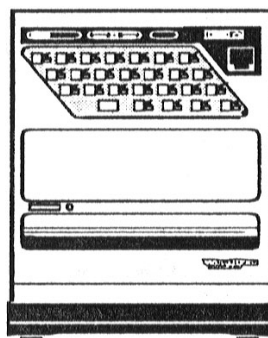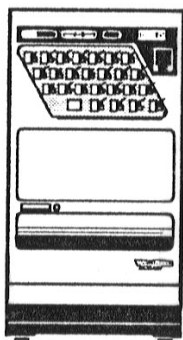

slide drive
+ single drives

Service program 15, button ...

	1	2	5	9	
				Display with red LED	OR Display with green LCD
Machines with electr. coin acceptor + active BDTA	2 0 6 5	3 1 0 7	0 2 0 0	0 0 0 4	0 0 4 4
with additional waiter key option			0 2 4 0		
with Krone card reader (MDB)	2 0 6 5		0 2 0 0	2 0 0 4	2 0 4 4
Machines with electr. coin acceptor and hopper + active BDTA	2 2 6 5	3 1 0 7	0 2 0 0	0 0 0 6	2 0 4 6 with electr. purse 0 0 4 6
Machines with coin system according to NRI - Simplex 0/MDB + active BDTA	6 2 2 9	3 1 0 7	0 2 2 0	0 0 0 4	2 0 4 4 with electr. purse 0 0 4 4
Machines with coin or card system according to Executive standard + active BDTA	2 0 8 1	3 1 0 7	0 2 0 0	0 0 0 4	0 0 4 4
Machines with coin or card system according to BDV standard + active BDTA	2 0 8 1	3 1 0 7	9 2 0 0	0 0 0 4	0 0 4 4

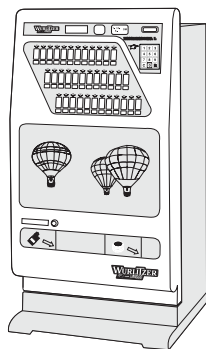

single drives
only



Service program 15, button ...

	1	2	5	9	
				Display with red LED	OR Display with green LCD
Machines with electr. coin acceptor + active BDTA with additional waiter key option	3 4 6 7	3 1 0 7	0 2 0 0		0 0 4 0
Machines with electr. coin acceptor and hopper + active BDTA	3 6 6 7	3 1 0 7	0 2 0 0		2 0 4 0 with electr. purse 2 0 4 2 with electr. purse 0 0 4 2
Machines with coin system according to NRI - Simplex 0/MDB + active BDTA	7 6 2 3	3 1 0 7	0 2 2 0		2 0 4 0 with electr. purse 0 0 4 0
Machines with coin or card system according to Executive standard + active BDTA	3 4 8 3	3 1 0 7	0 2 0 0		0 0 4 0
Machines with coin or card system according to BDV standard + active BDTA	3 4 8 3	3 1 0 7	9 2 0 0		0 0 4 0